

DSLR TERMINOLOGY



PHOTZY.COM

Perfect to print A5 size
14cm x 21cm / 5.83" x 8.27"

Even though each camera make and model is different, this guide will help you to easily identify basic parts and functions.

PICTURE REVIEW BUTTON



VIEWFINDER
The main source for viewing the scene and menu options

LCD WINDOW

DIOPTR

It allows you to customize the viewfinder so that you can see a clear focused image.

LENS ALIGNMENT MARK

Line up the matching dots to fit the lens into the mount, and then twist until it locks.

SHUTTER RELEASE

When pressed, the shutter of the camera is "released", so that it opens to take a picture.

DEPTH OF FIELD PREVIEW

It helps you see potential depth of field

HOTSHOE

The mounting point on the top of the camera to attach a flash unit.

SHOOTING MODE DIAL

Sets the camera to your desired shooting mode.



LCD CONTROL PANEL

Provides information on camera settings (ISO, white balance, battery power, number of pictures left, etc.)



BATTERY SLOT

TRIPOD THREAD SLOT